




INSTALLATION OF SINK

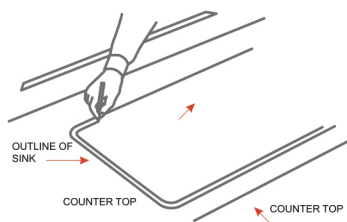


Trace the outline of the template and cut the countertop according to the templated outline using appropriate cutting tools. The template is for guidance only. Use the actual sink to ensure an accurate cutout opening.

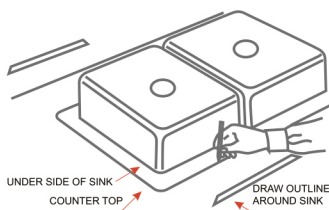


Draw a line 1 cm inside the sink outline

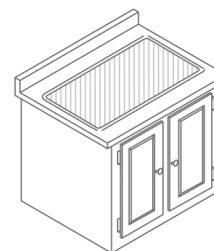


Locate the drill holes on the underside of the countertop, approximately 1" from the edge of the sink to be installed. Holes should be evenly spaced approximately 6" to 8" apart, starting from every corner as shown in the illustration.

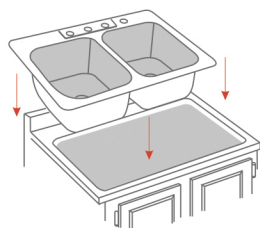

Clean the sink flange and the underside of the cutout area of the countertop, ensuring that the surface is smooth and free of grease.

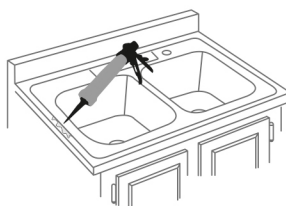

Apply a continuous bead of silicone caulk evenly on top of the sink flange. Position and align the sink over the countertop opening, then press the sink onto the countertop. Turn the bent end of the mounting bracket to secure it over the sink rim.

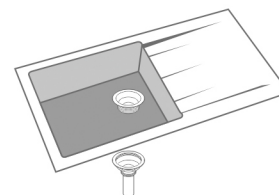

Wipe away any excess silicone caulk with a damp cloth. Connect the drain and water supply as per the manufacturer's instructions.



DRILLING TAP HOLE

Turn the sink upside down and utilize the markings to drill the hole using a wood cutting bit.